
FOOTWELL & GLOVE BOX LEDS



Using a flat blade screwdriver, carefully pry the footwell light housing out of the panel. Remove the factory bulb. DO NOT USE METAL OBJECTS TO REMOVE BULB TO AVOID BLOWING FUSE. Bulb may be hot.

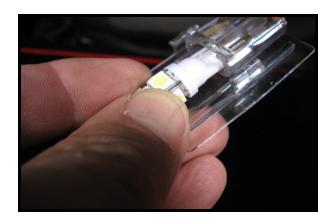


Install the led bulb into light housing. If it doesn't light, remove and turn it 180 degrees and re-install. It should now light. Make sure the interior lights havent timed out which they will do every few minutes. Re-install light housing

C5 GLOVE BOX LED



Open the glove box and remove stock bulb from housing. Bulb may be hot. Install LED into housing. If it doesn't lite, turn it 180 degrees and re-install. Bulb should not lite.

C6 GLOVE BOX LED

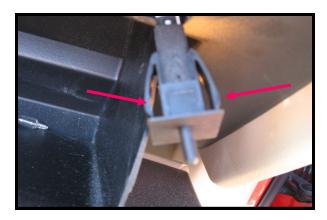

Open the glove box and locate this switch that holds the bulb. The red arrows show the 2 tabs on the back of the switch that need to be squeezed together to remove the switch. You can also disconnect the switch to make it easier. Remove factory bulb and insert led bulb. If it doesn't lite, turn 180 degrees and re-install. Re-connect the switch and re-install the switch in the panel.

C6 LICENSE PLATE LEDS



Using a #15 Torx screwdriver, remove the 2 screws holding the license light in place.



Remove the light housings, twist the grey socket 1/4 turn counterclockwise to remove it from the housing.



The bulb may be hot so use a shop towel to grab it and remove it.



Turn on the lights. Plug in the led bulb. If it doesn't light, turn it 180 degrees and re-insert.




Re-insert bulb socket into housing and twist 1/4 turn clockwise. Re-attach housing with the 2 torx screws and repeat for the second housing.

C6 REAR COMPARTMENT L.E.D.'S



Remove the rear compartment lamps from the carpet.

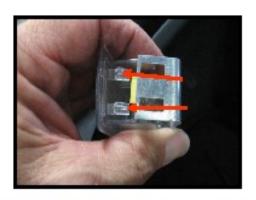

Remove the bulb shield by un-latching it from these 2 plastic tabs.



Un-hook the 2 wire loops from the end on the factory bulbs. (careful, they may still be hot). Remove the bulbs. Install the new led bulbs and test. Led bulbs are polarity sensitive so if they don't light, swap ends and re-test. Be sure to face the leds toward the clear lens and not toward the metal shield. Make sure interior lights havent timed out which they may do after about 15 minutes.



Replace bulb shields and plug factory connector back in. Re-install housing into carpet. Repeat process for both bulbs and enjoy the new lights!



C6 LED MAP LIGHTS



Begin by carefully prying out the map light lens with a small flat screwdriver. Best place to start is near the button.



Remove the factory bulbs. (careful, they may still be hot). A little trick we like to use is using a small plastic wire tie to slip around the base of the bulb, pull it tight and pull the bulb out. Avoid using anything metal to remove them as you may short out the contacts.



Insert the new led bulb. It is polarity sensitive so if it doesn't light, turn it 180 degrees and insert it. Make sure the interior lights haven't "timed out" which they may do after about 15 minutes.



Re-install the lenses by first engaging the tab (red arrow). Then press the lens back into place. Repeat this procedure for both map lights. That's it! Enjoy the new lights!