


REMOTE 4 BUTTON FUNCTION


- A Button:** Quick Press: 1 thru 15 Programs: 15 Different Static Colors to set Color
Quick Press: 16 thru 17 Programs: Select 7 Color Jumping or Million Color Fading
Long Press: 1 thru 15 Programs: Control Static Color Dimming
- B Button:** 1 thru 15 Programs: Quick Press to Flash pre-selected Color
16 thru 17 Programs: Faster Jumping and Fading
- C Button:** 1 thru 15 Programs: Quick Press to select Color Fading of your pre-selected Color
16 thru 17 Programs: Slower Jumping and Fading
- D Button:** On/Off. Press Long to Reset

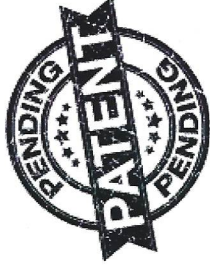

USE THIS



TO CHOOSE

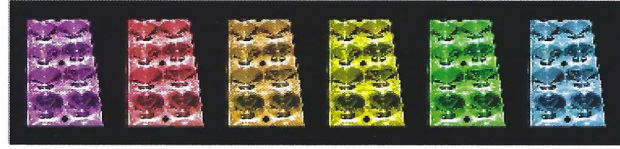

ALL COLORS

NUMBER	A-BUTTON	B-BUTTON	C-BUTTON	D-BUTTON
1	Red	Flashing	Fading	Turn on / Turn off
2	Green	Flashing	Fading	Turn on / Turn off
3	Yellow	Flashing	Fading	Turn on / Turn off
4	Blue	Flashing	Fading	Turn on / Turn off
5	Magenta	Flashing	Fading	Turn on / Turn off
6	Agua	Flashing	Fading	Turn on / Turn off
7	Pink	Flashing	Fading	Turn on / Turn off
8	Light Yellow	Flashing	Fading	Turn on / Turn off
9	Light Purple	Flashing	Fading	Turn on / Turn off
10	Light Blue	Flashing	Fading	Turn on / Turn off
11	Light Aqua	Flashing	Fading	Turn on / Turn off
12	White	Flashing	Fading	Turn on / Turn off
13	Fluro Green	Flashing	Fading	Turn on / Turn off
14	White	Flashing	Fading	Turn on / Turn off
15	Bright White	Flashing	Fading	Turn on / Turn off
16	Color Jumping	Faster Jumping	Slower Jumping	Turn on / Turn off
17	Million Color Fading	Faster Fading	Slower Fading	Turn on / Turn off

WARNING: If you lose your KEY- FOB Remote Control. You will lose Accent Control capabilities. KEY-FOB Remote Control and the Accent controller are programmed as sets. You must purchase a new controller unit and remote control as a set.

NOTE: Program Number and colors might change from time to time. Quake LED reserves the right to change programs and color choices.