

1984–1995 Coupe Cargo Bulb

Using a small flat screwdriver, unsnap the rear of the lens from the trim panel.

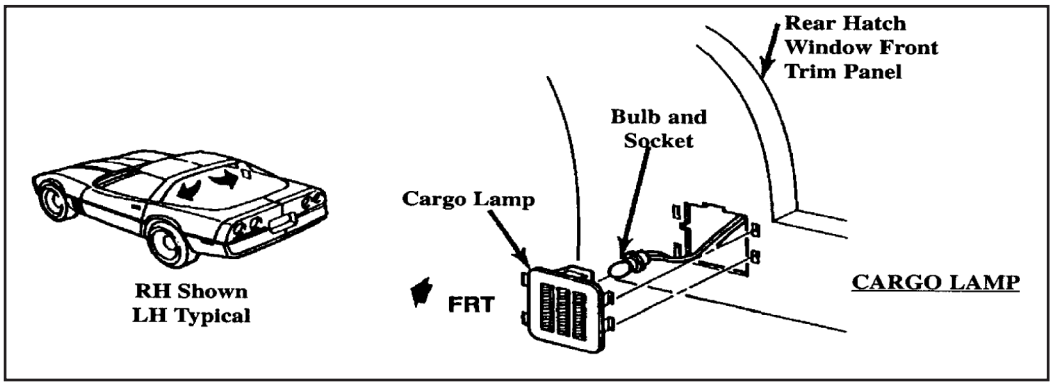


1990–1995 Courtesy Door Lights


To access the bulbs, unclip the lens assembly from the door with a small flat screwdriver. (See Diagram) Replace both bulbs.

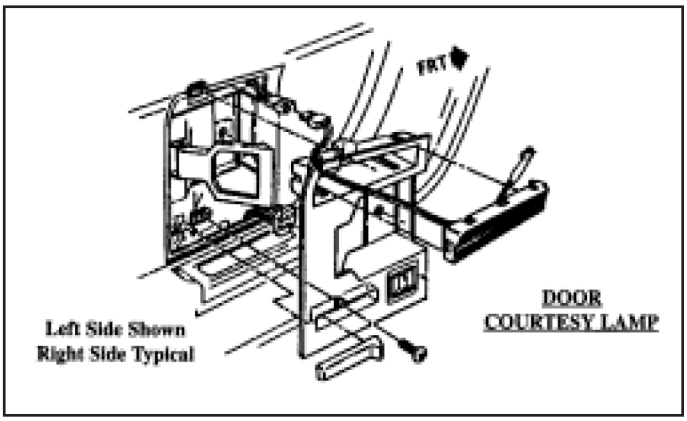

1984–1995 Coupe and Convertible Front Floor Courtesy Lamp

To access the bulb, unsnap the lens from the lower panel by inserting a flat screwdriver under either end of the lens. Twist the screwdriver. If needed, do the same on the other end of the lens. Refer to picture(s).

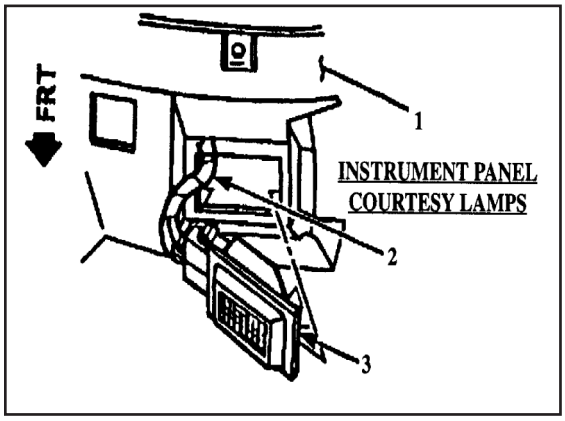

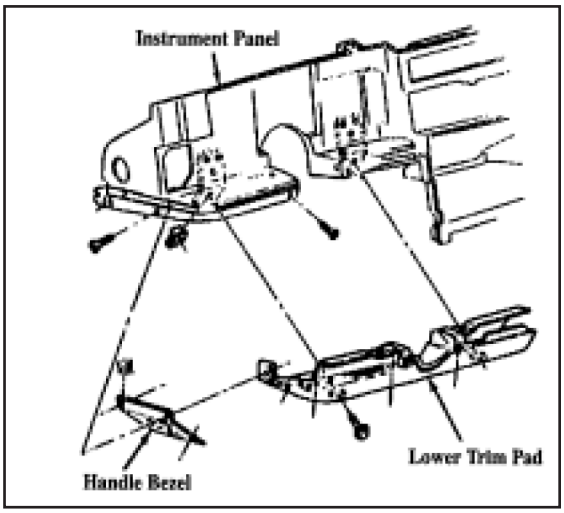

Corvette Central .com
800-345-4122

DATE	REVISION	AUTH	DR
9/2/2008			


INSTALLATION INSTRUCTIONS

PART NO. 664475 SHEET 1 OF 3

1986–1995 Convertible Rear Floor Lamp

To access the bulb, unsnap the lens from the carpet area by inserting a flat screwdriver under either end of the lens. Twist the screwdriver. If needed, do the same on the other end of the lens. Refer to picture(s).

1- Intermediate Floor Panel Extension
2- Cargo Lamp Retainer
3- Cargo Lamp
4- Cargo Lamp Wiring Harness
5- Body Front Wiring Harness Assembly

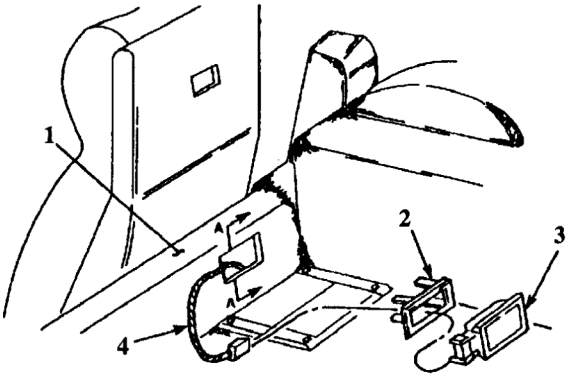

CARGO LAMP - CONVERTIBLE

1984–1995 Visor Mirror Bulbs


The mirror light assembly can be unsnapped from the sunvisor; but, it is somewhat difficult to snap back into position. An easier way is to pull the visor away from either end of the light cover and use a small screwdriver to unclip the white socket that is holding the bulb. Reassemble in the same way.


1- Mirror/Lamp Assembly Engaging Tabs
2- Bulbs
3- Lamp Harness
4- Mirror Cover Door
5- Lamps
6- Switch On/Off

1984–1995 Mirror Map Lamp

To access the map and reading bubls, take a small flat screwdriver and unsnap the lens covers from the mirror. The bulb sockets can now be removed.

1- Driver Side Courtesy/Map Lamp
2- Courtesy/Map Lamp Switch
3- Inside Rear View Mirror Assembly
4- Console Flood Lamp
5- Passenger Side Courtesy/Map Lamp
6- Release Tab Indent
7- Passenger Side Lamp Housing
8- Driver Side Lamp/Switch Housing

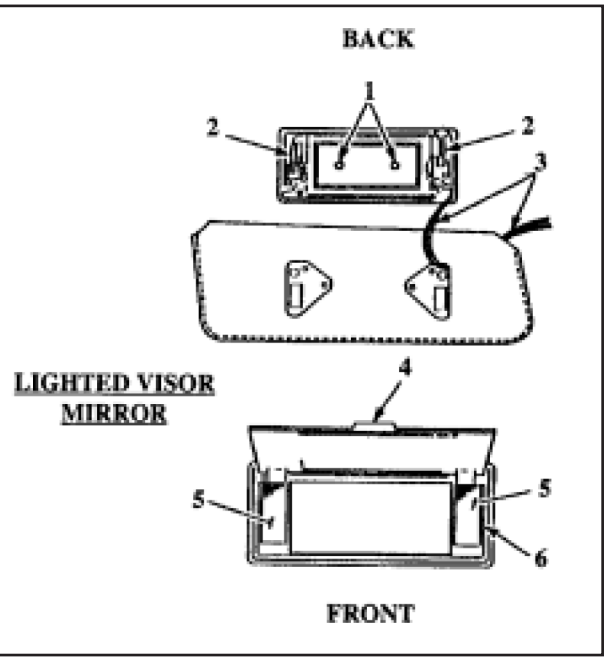

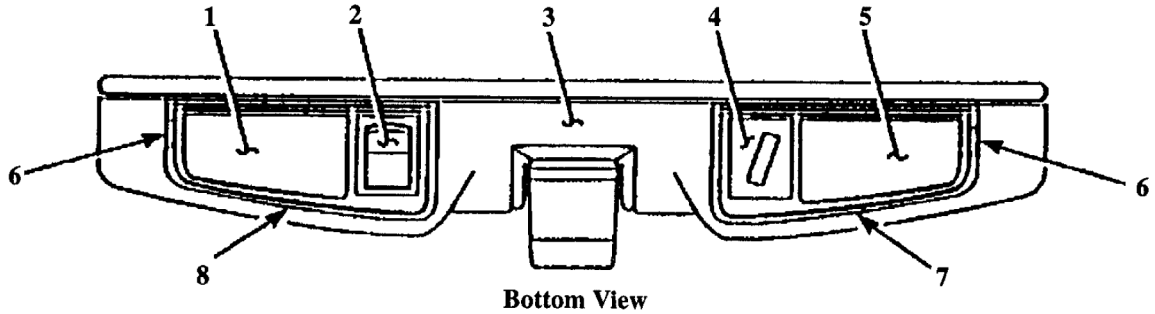

Bottom View
COURTESY/MAP AND CONSOLE FLOOD LAMPS

Corvette Central .com
800-345-4122

DATE	REVISION	AUTH	DR
9/2/2008			


INSTALLATION INSTRUCTIONS

PART NO. 664475 SHEET 2 OF 3

1987–1995 Mirror Reading Lamps

To access the map and reading bubls, take a small flat screwdriver and unsnap the lens covers from the mirror. The bulb sockets can now be removed.

1- Driver Side Courtesy/Map Lamp
2- Courtesy/Map Lamp Switch
3- Inside Rear View Mirror Assembly
4- Console Flood Lamp
5- Passenger Side Courtesy/Map Lamp
6- Release Tab Indent
7- Passenger Side Lamp Housing
8- Driver Side Lamp/Switch Housing

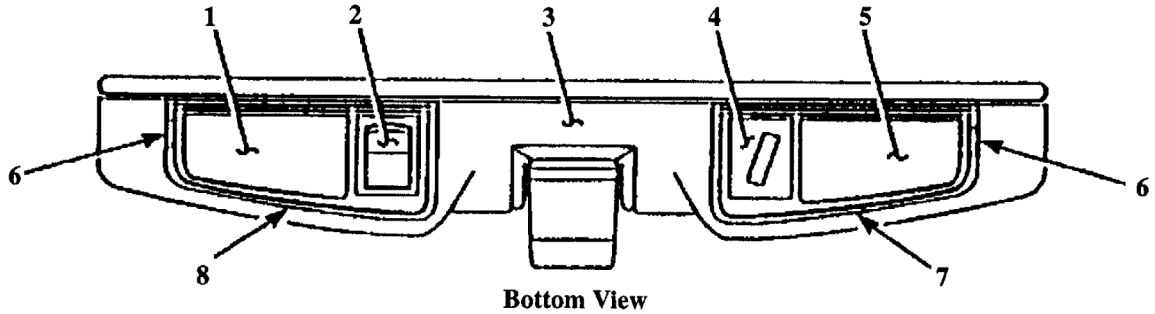


Bottom View
COURTESY/MAP AND CONSOLE FLOOD LAMPS

1990–1993 IP Glove Box Bulb

To access the bulb, open the glove box and unclip the light switch from the instrument panel by using a small flat screwdriver. The bulb is attached to the back of the light switch button.

1- IP Compartment
2- IP Harness Connector
3- Screw
4- Upper Trim Pad
5- Instrument Panel

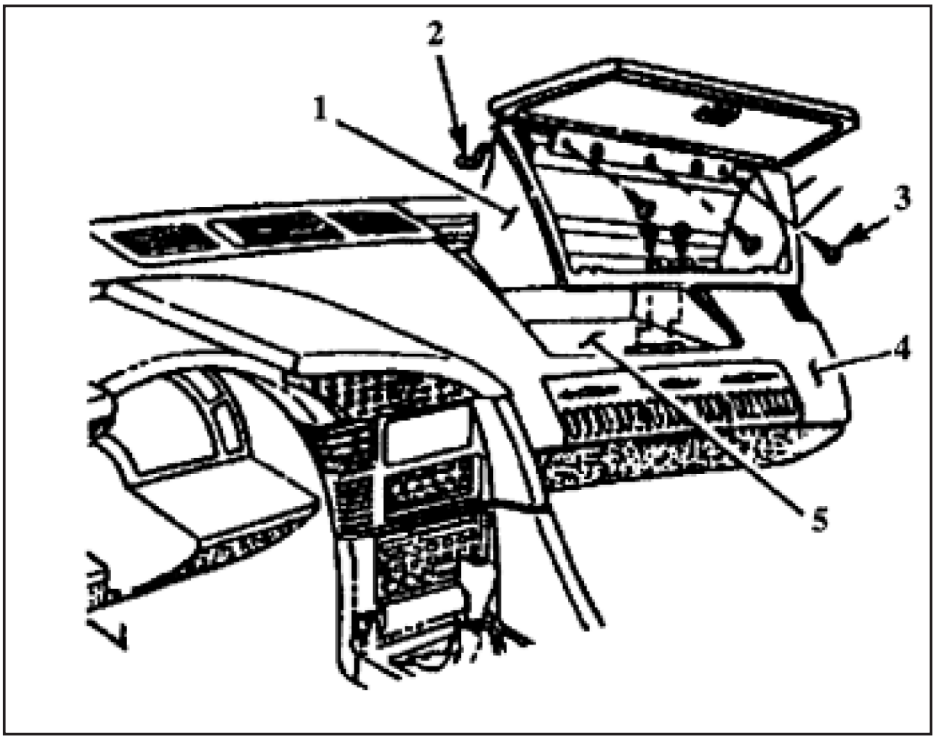

Corvette Central .com
800-345-4122

DATE	REVISION	AUTH	DR
9/2/2008			

INSTALLATION INSTRUCTIONS

PART NO. 664475 SHEET 3 OF 3