


C7 HATCH/TRUNK LED BULBS


C7 HATCH/TRUNK LED BULBS




Start by prying the factory light housing out of the panel at the inside edge of the housing (red arrow).

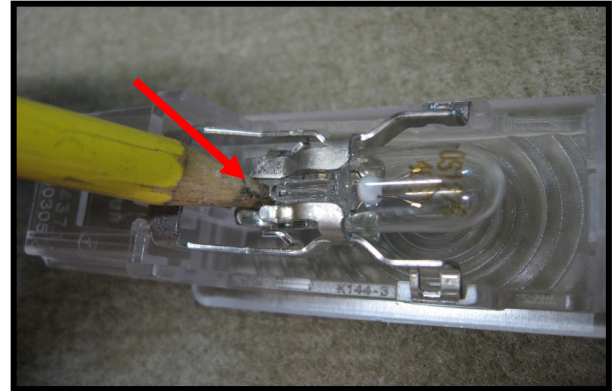

Using something non metallic (a pencil works best) pry the factory bulb out of its contacts. It will be hot so don't let it burn your carpet.

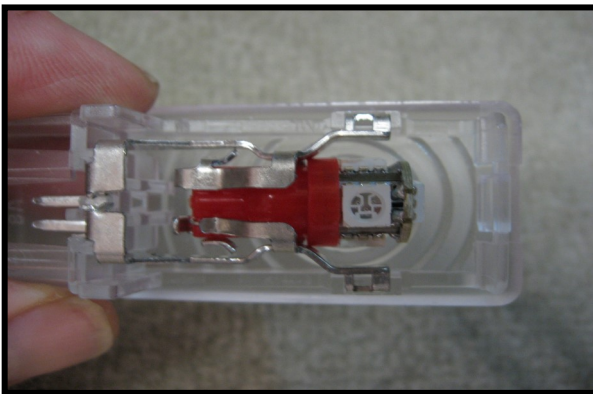

Install the led into the light housing. If it doesn't light, remove it turn it 180 degrees and re-install it. Also make sure the lights haven't timed out which they will do after about 15 minutes.

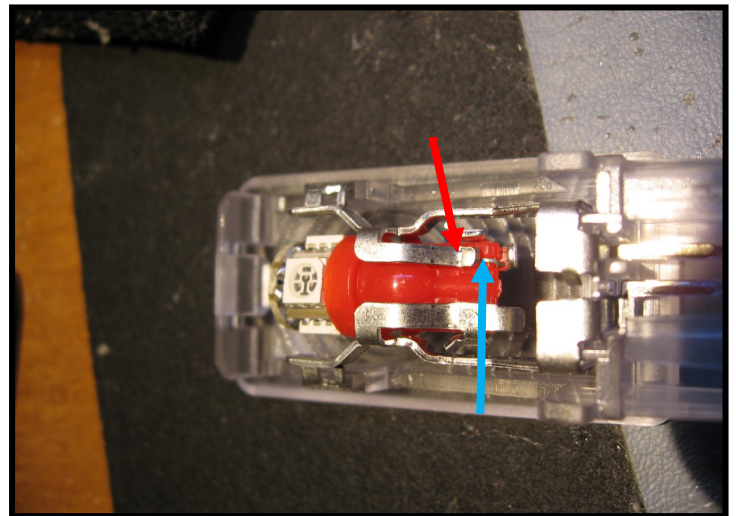

If you are still having trouble getting it to light make sure the factory contact (red arrow) is contacting the small led wire (blue arrow). If they are not contacting each other you can move one or both of them to get contact. After all is working re-install the housings and enjoy the new lights!