


# C5 HATCH/TRUNK LEDS



Pull the hatch/trunk light housing from the carpet to gain access to the back of the housing.

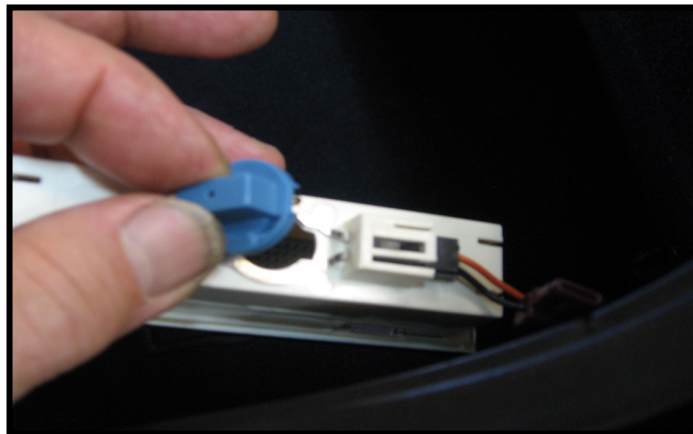

Turn the bulb socket 1/4 turn counterclockwise to remove it. Pull the factory bulb out and insert the led. Replace the socket and lock it in place. If the led doesn't light remove the socket and turn it 180 degrees and re-insert it. It should now light. The lights will time out after about 15 minutes so keep that in mind if it doesn't light. Push the housing back into the carpet and repeat procedure on the other side.