


1971-1972 Corvette Vacuum Hose Kit for Headlights & Wiper Door

Product # ZHDL-217

Hose #	Size	Color	Length	Description
1	Medium	Black	4"	Intake Manifold Fitting to Plastic Filter
2	Medium	Black	20"	Plastic Filter to Metal Valve
3	Small	Black	30"	Metal Valve to T-Connector (Under Dash)
4	Small	Yellow	11"	T-Connector to Wiper Solenoid (Back of Tach)
5	Small	Black	18"	T-Connector to Headlight Switch
6	Small	Blue	18"	Headlight Switch to Manual Override Valve (Headlamp)
7	Small	White	14"	Wiper Solenoid to Manual Override Valve (Wiper Door)
8	Small	Red	20"	Wiper Override Valve to Metal Pipe
9	Small	Red	18"	Metal Pipe to Wiper Arm Vacuum Valve
10	Small	Black	15"	Wiper Arm Vacuum Valve Vent Hose (1 End Connects)
11	Small	White	36"	Actuator Relay to Wiper Arm Vacuum Valve
12	Large	Green	24"	Wiper Relay to Actuator
13	Large	Red	27"	Wiper Relay to Actuator
14	Large	Yellow	25"	Metal Pipe to Wiper Relay
15	Large	Yellow	5"	T-Connector to Metal Pipe
16	Medium	Black	21"	Metal Check Valve to Vacuum Tank
17	Large	Black	9"	T-Connector to Vacuum Tank
18	Large	Yellow	84"	T-Connector to RH Headlight Relay
19	Small	White	100"	Manual Override Valve to T-Connector
20	Large	Yellow	77"	Vacuum Tank to LH Headlight Relay
21	Small	White	14"	T-Connector to RH Headlight Relay
22	Small	White	14"	T-Connector to LH Headlight Relay
23	Large	Red	23"	RH Headlight Relay to Actuator
24	Large	Red	23"	LH Headlight Relay to Actuator
25	Large	Green	16"	RH Headlight Relay to Actuator
26	Large	Green	16"	LH Headlight Relay to Actuator

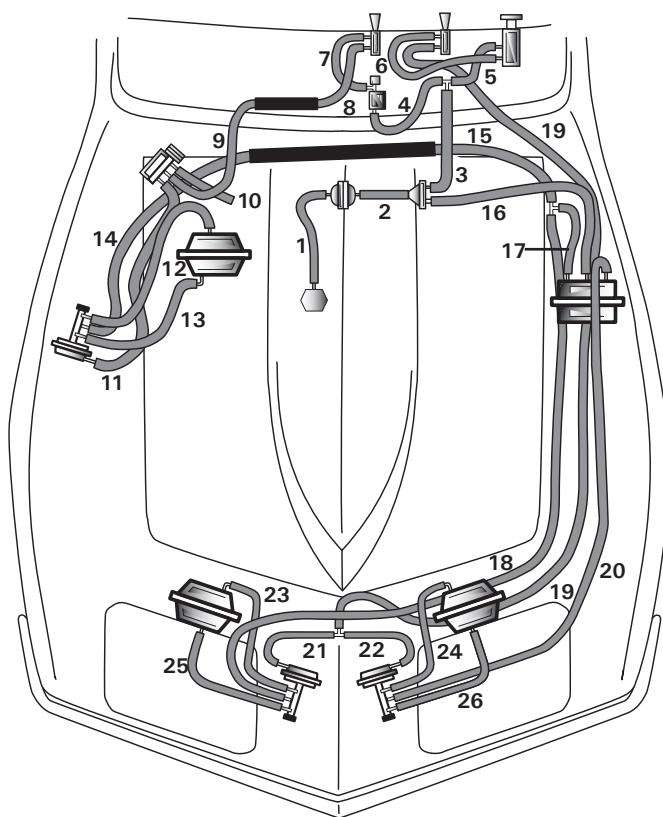

Installation Instructions

1. It is best to replace hoses one at a time using the diagram and color codes supplied. Hoses can be trimmed to desired length once installed correctly.
2. Large black plastic "T"s connect hoses 10, 17 & 24.
3. Small white "T" connects lines (9, 18 & 19) and (3, 4 & 5).
4. Three small straight connectors are provided for ease of installation under the dash. They install behind the firewall grommet that hoses 3, 8 & 19 pass through.
5. Lines 3, 8 & 19 pass through the same firewall grommet.
6. Lines 9, 10 & 11 pass through the same firewall grommet.
7. Vacuum lines running together were taped on approximately 6" centers. Refer to your old hose harness. New tape is provided in the kit.
8. Headlight & wiper door actuator relays are color and letter coded R=Red, Y=Yellow & G=Green. To install, connect outer hoses first and then install center hose.
9. Hose 14 must be cut to install heater/AC vacuum control. Reuse old "T", not included in this kit.
10. Wiper vacuum override valve commonly labeled blue/white, but uses white/red hoses.



Zip: Corvettes are all we do.

www.zip-corvette.com
1-800-962-9632