


# SP464 Instructions

Step 1: Remove stock fan – 4 bolts

Step 2: Locate the flat spot on the top right side of the stock fan shroud

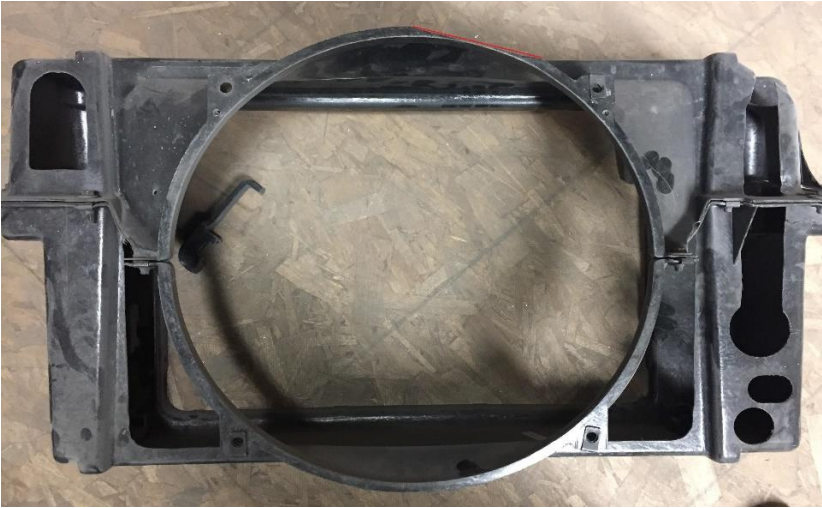

Step 3: Looking at the new SP464 fan kit, locate and align the same flat spot on the aluminum shroud to the flat spot on the stock shroud



Step 4: Attach fan kit using the stock Bolts

Step 5: Plug the new fan into the Stock fan connector and you are finished.



Any questions please call: 1-517-548-0600 Thank you for purchasing our SP464 fan kit.