
## 63-67 AC & HEATER BOX SEAL REBUILD KIT

25 seals + 32 rivets: (25) 5/32 x 1/4, (4)1/8x 3/16, (3) 1/8 x 1/4"

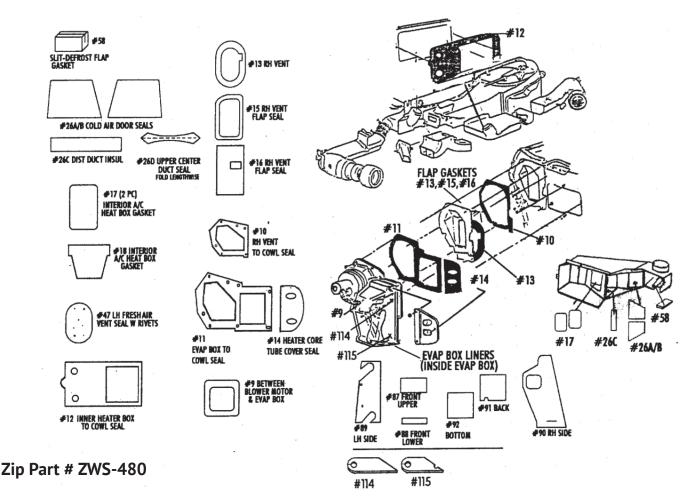

## **INSTRUCTIONS FOR REPLACING VENT DOOR SEAL:**

1. Remove grill and vent door from car.

2. Using a 1/8" drill, drill out the rivets holding the door together

- 3. Seperate the two metal halves, clean and repaint as required.
- 4. Place the new seal between the metal halves and install the rivets.
- 5. The longer rivets are for the rods and the shorter rivets are for just the metal and rubber.
- 6. Place the head of the rivet on a metal block and hammer the hollow end until the rivets pinch the

two halves together. Different years use different amounts of rivets.

7. Replace vents in car.

## www.zip-corvette.com 1-800-962-9632

