

C8 Corvette Split Window Applique

Part Number: CV-C8R190007-PASB


Required Tools:

- 50% Isopropyl Alcohol

Caution: If any part of this installation seems beyond your level of installation experience, please seek the help of a certified professional.

Installation Procedure

1. Clean the installation area with soap and water, then 50% isopropyl alcohol.
2. Before removing the tape release film, place the Split Window Applique onto the rear window as shown in the "Completed Result" photo on the following page to get a feel for the proper alignment.

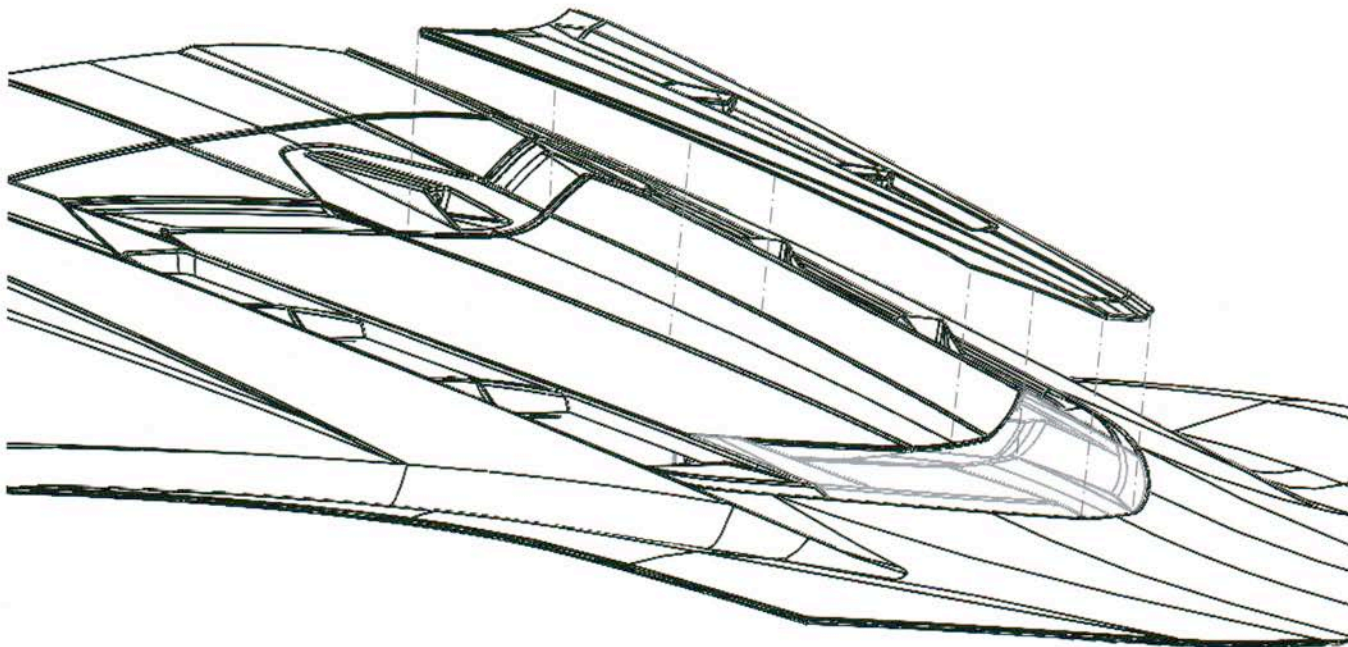

3. Lift up the Split Window Applique, and remove the red tape release film from the underside of the part.
4. Carefully align the Applique back onto the rear window. **Once the tape makes solid contact with the vehicle, do not attempt to peel the Applique back up to realign it as the tape could be damaged.**

5. Once the Split Window Applique is seated onto the rear hatch, press the Applique firmly into the surface of the vehicle. Move your hand along the surface of the part, holding pressure at each location for a few seconds. This will ensure the tape forms a strong bond.
6. After installation is complete, check rear view camera visibility (if rear view camera is equipped). If the Applique is visible, change the zoom and camera position until the applique is just out of frame.
7. If you wish to remove the Applique at a later time, use a hair dryer (not a heat gun) at the edge of the part to heat the tape. Slowly and firmly peel up the Applique one area at a time. It should take approximately 1 hour to remove without damaging the Applique.

Completed Result



Holley® Performance Products, Inc.
1801 Russellville Road
Bowling Green, KY 42101

Technical Support: 1-866-464-6553
Phone: 1-270-781-9741
www.holley.com

© 2022 Holley Performance Products, Inc. All rights reserved. Tous Droits Réservés.

199R12432
Date: 7-15-22