
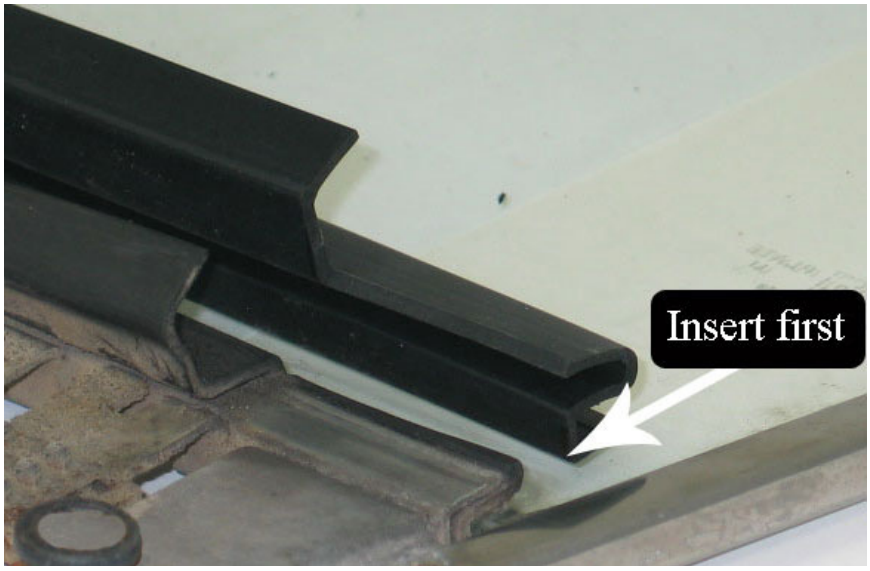



Due to minor distortion of the rubber on the lower seal during assembly, it is recommended to assemble the side window and trim the front portion of the seal. Using an exacto knife, box cutter or utility knife trim the front portion of the seal even with the “U” channel to match the existing notch. This will avoid interference with the front roller channel.

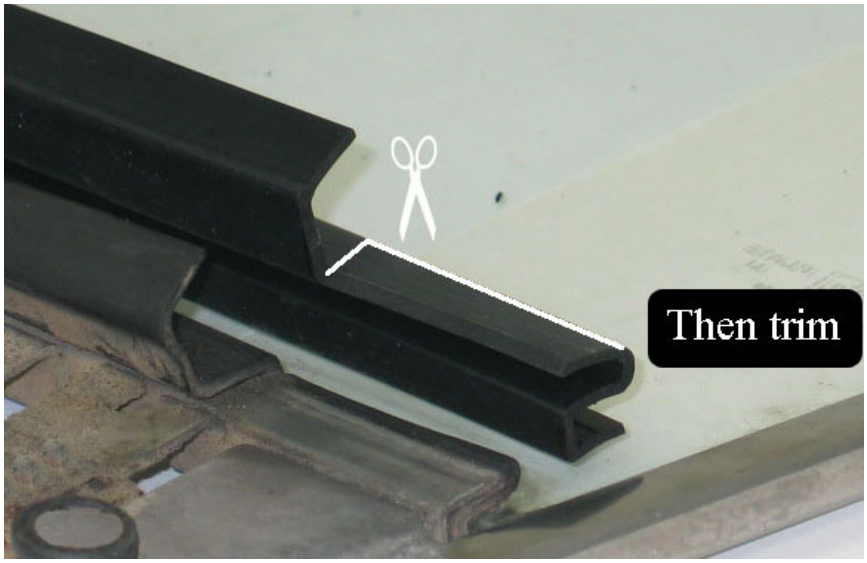

Corvette Central .com
800-345-4122

| DATE | REVISION | AUTH | DR |
|---|---|---|---|
| 5/14/2010 | | | |
| | | | |
| | | | |
| | | | |
| | | | |

INSTALLATION INSTRUCTIONS

PART NO. 281014 SHEET 1 OF 1