




LLOYD MATS

2013 CORVETTE POST PLACEMENT CHANGE

Two of the three Factory mat anchor hooks mounted to the original floor in the 2013 Corvette changed location midway through the 2013 production year. The easiest way to determine if you need early or late production floor mats is to check the location of the single hook in the passenger seating area.

Lay a ruler flat on the passenger side floor and measure the distance from the center of the anchor hook to where the door sill starts to slope upward. See the photos below for early and late hook placements locations.

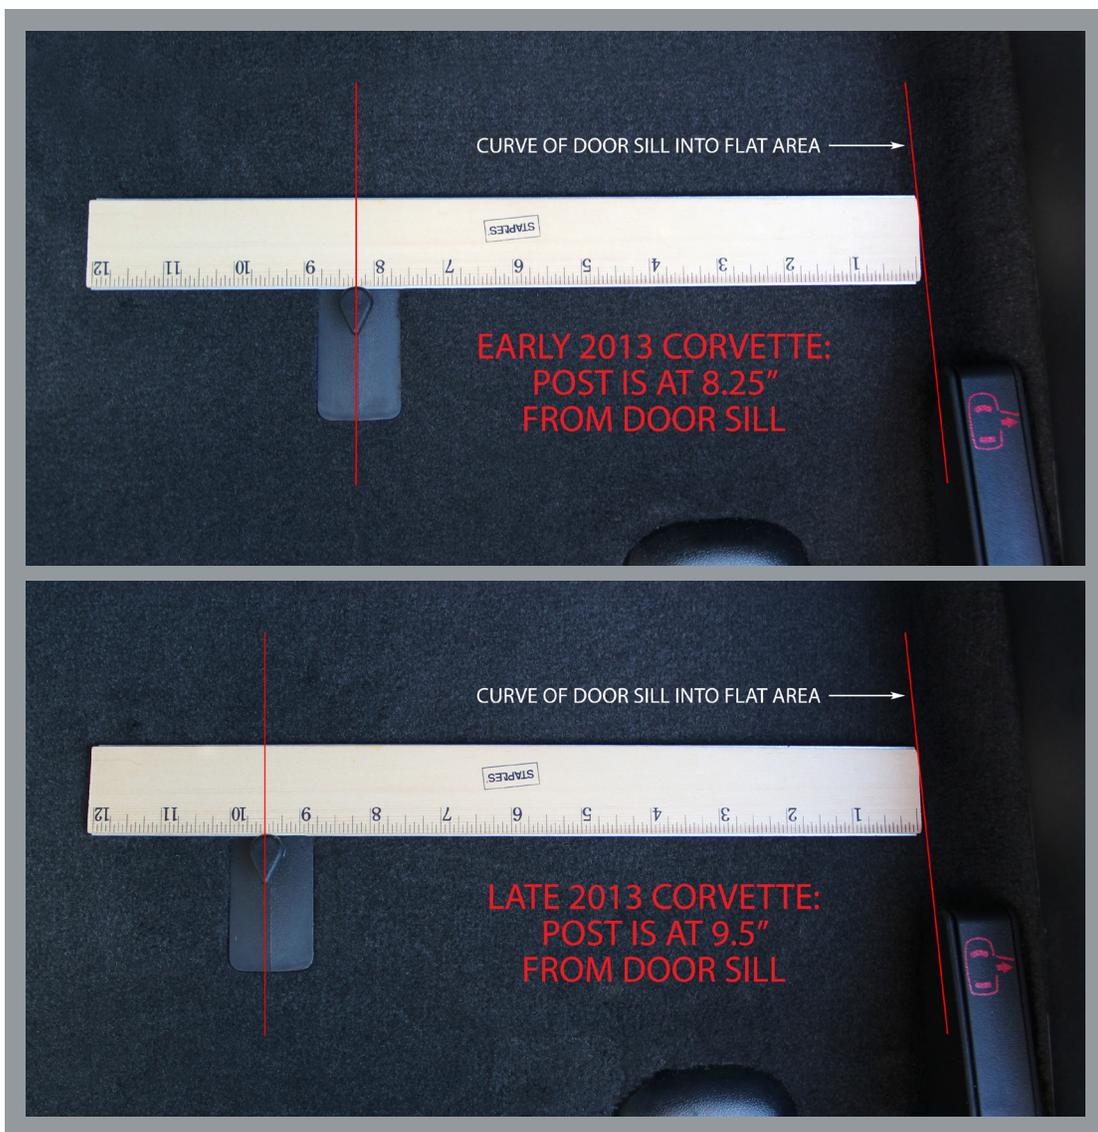

Early 2013 Corvette Part # 3154020
Late 2013 Corvette Part # 3154030