
C5 CORVETTE HYPERFLASH HARNESS Installation Instructions

BEFORE STARTING WORK ON CORVETTE, ENSURE ENGINE IS OFF AND CAR IS IN PARK

Tools Required:
- T-10X4 Torxdriver
- Small Flat Screwdriver



STEP 1:
Remove the Fog lamp/Trunk release switch plate by gently pulling away from the dashboard, then unplug the electrical connector.

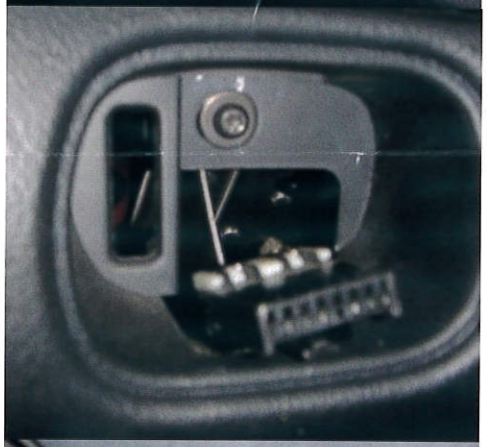

Remove the screw located behind the switch plate.



STEP 2:
Remove the two screws securing the knee pad from under the dashboard.






STEP 3:
Remove the IATS (Interior Air Temperature Sensor) cover plate


Unplug the electrical connector. (Skip this step if your vehicle is not equipped with the IATS)

Once unplugged you will notice a screw behind it, remove this screw.

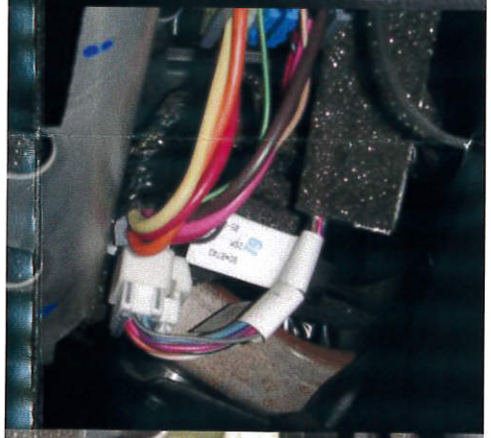

STEP 4:
Remove the dashboard knee pad from the steering column by gently pulling it away.

STEP 5:
Locate and unplug the original harness under the dash, it should be directly below the Ignition key switch.

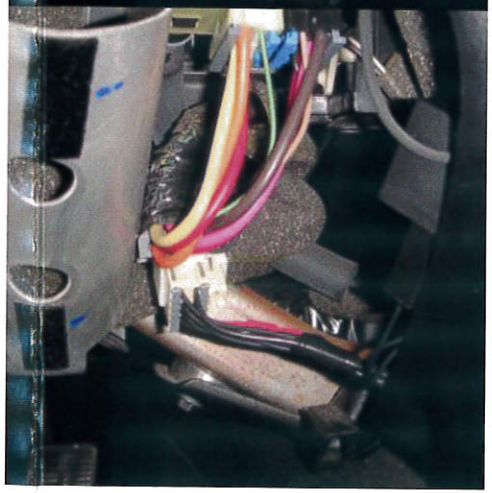

STEP 6:
Plug the Hyperflash bypass Harness inline/between the same harness connectors that was unplugged in Step 5 once plugged in.

Test the operation of the new bypass flasher harness prior to reassembly!