


1968-1977 Corvette w/AC Heater Box Seal Rebuild Kit

Product # ZM-2535

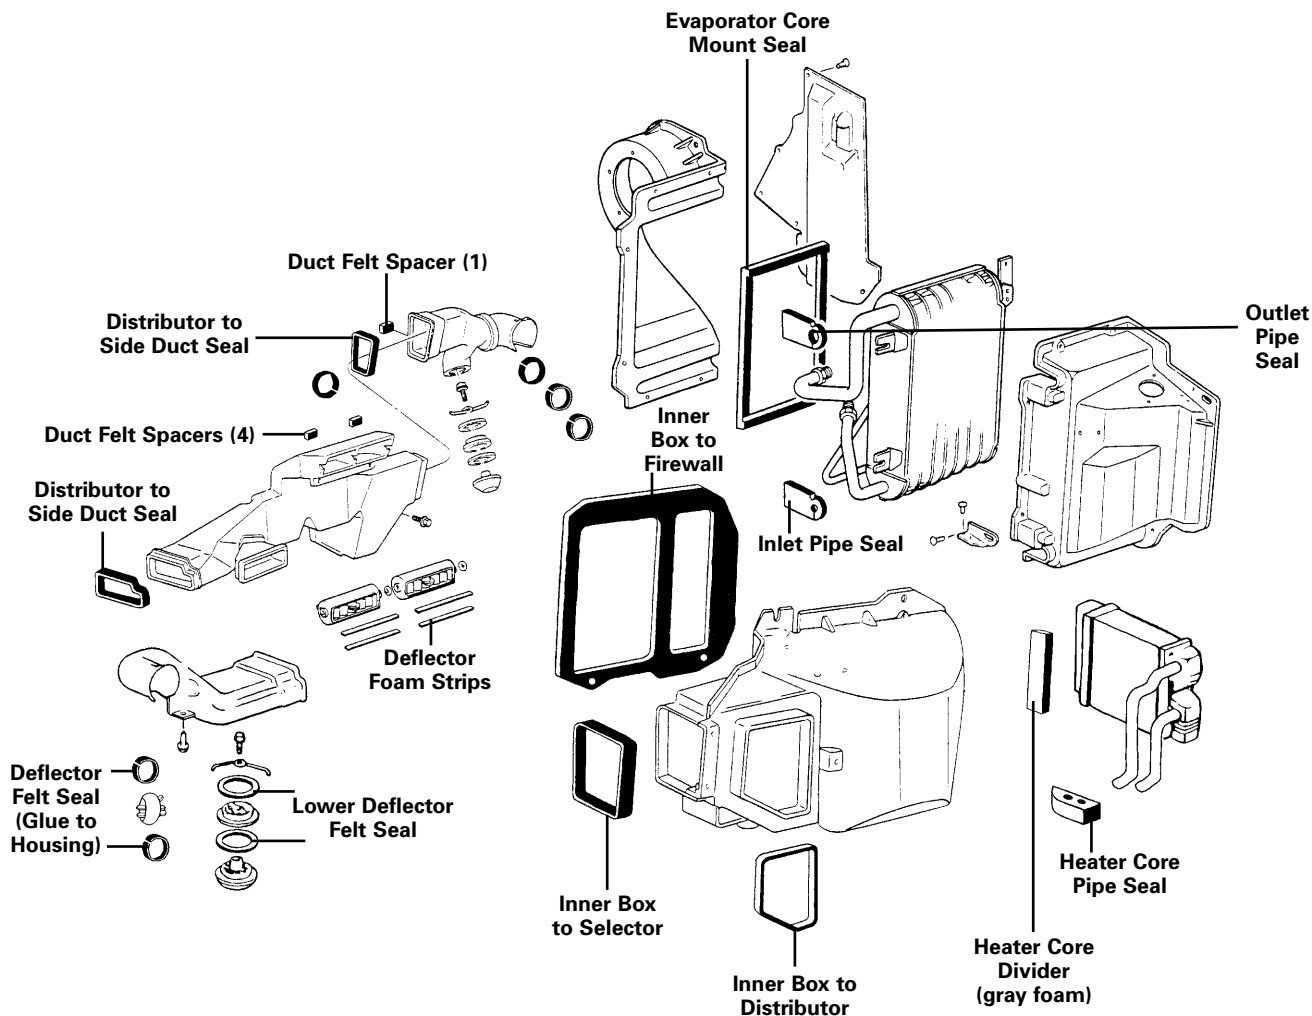

Installation Instructions

1. Remove components and determine position of seals before installing.
2. Individual years vary. Some seals may not be used.
3. Clean all surfaces before installing seals to heater/AC boxes & ductwork. Use weatherstrip adhesive to install seals; before assembly allow adhesive to dry.
4. Weatherstrip tape is used to attach outer boxes to firewall.

**www.zip-corvette.com
1-800-962-9632**



Zip: Corvettes are all we do.