


1978-1982 w/AC Heater Box Seal Rebuild Kit

Product # ZM-2536

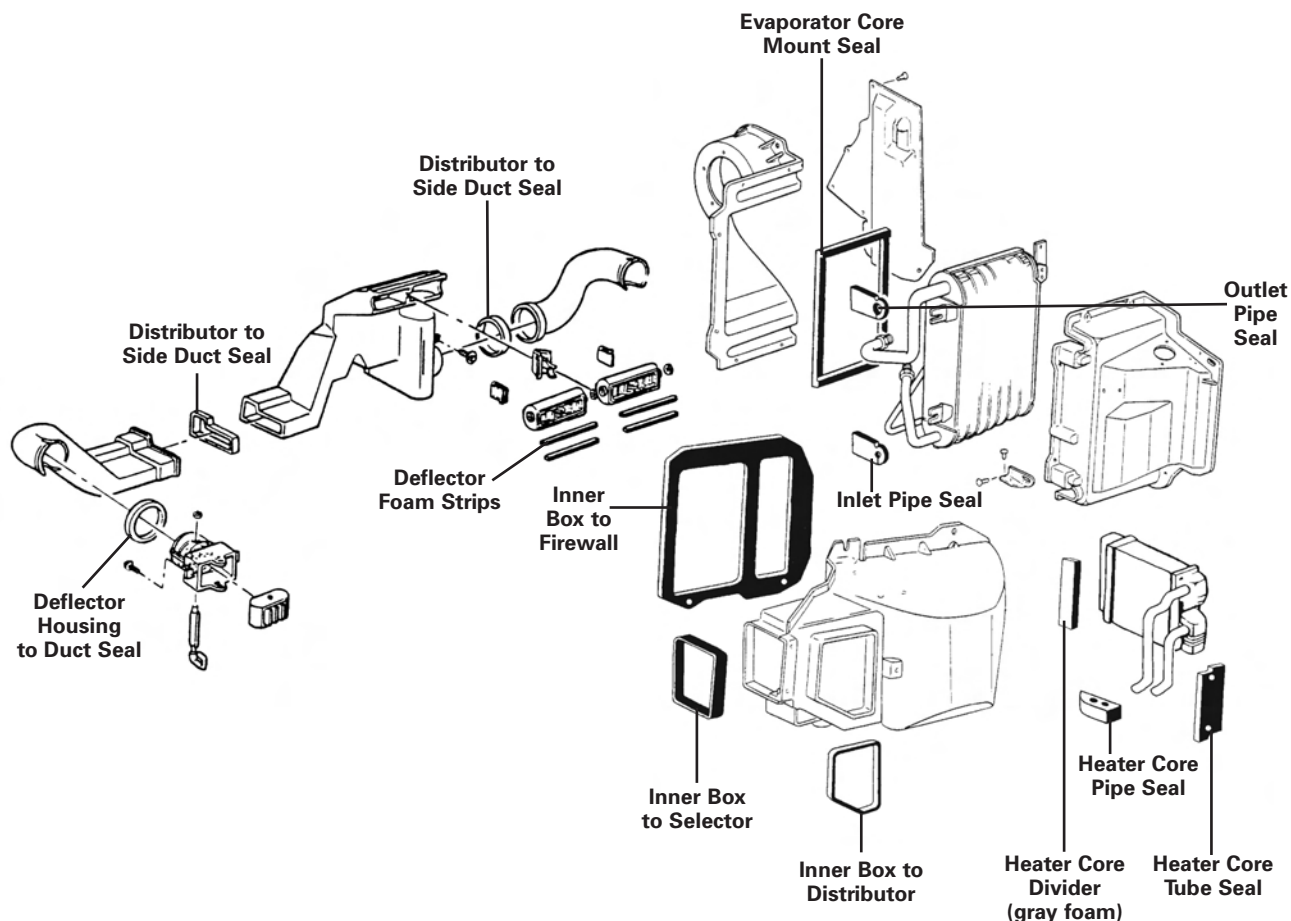

Installation Instructions

1. Remove components and determine position of seals before installing.
2. Clean all surfaces before installing seals to heater/AC boxes & ductwork. Use weatherstrip adhesive to install seals; before assembly allow adhesive to dry.
3. Weatherstrip tape is used to attach outer boxes to firewall.

www.zip-corvette.com
1-800-962-9632

Zip

Zip: Corvettes are all we do.