


AMERICAN CAR CRAFT INSTRUCTIONS

2014 Corvette Stingray – 3pc Retro Matrix Series Front Grille Polished

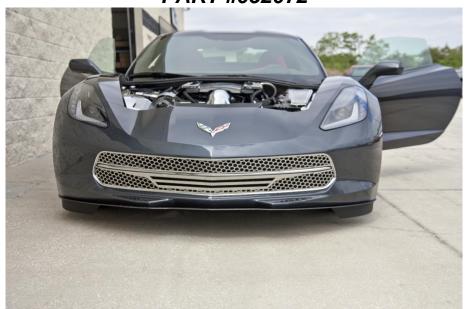



PARTS INCLUDED:

4-Promoter Sticks

1-Test Kit

1-Length of cowls molding 117"

Liner info: Your new accessories will come to you with a protective surface liner. Leave this liner in place until the installation is complete to prevent finger prints and or possible scratches during installation. This liner is required to remain on the part until you are instructed to remove it.

Installation Video Instructions: http://youtu.be/awEnldcc0qA

If any questions occur during installation please contact American Car Craft at 727 861-1500. Thank you and enjoy your purchase!

AMERICAN CAR CRAFT

18924 SAKERA RD HUDSON FL 34667

Phone: 727 861-1500 Fax: 727 861-1520

www.americancarcraft.com