

Install ZO6 Rear Vent screens on the C5 Corvette

Estimated time to install is 20 minutes.

THE ADHESIVE TAPE REQUIRES A TEMPERATURE OF 70 DEGREES OR ABOVE TO STICK PROPERLY DURING THE INSTALLATION. - The screen is woven, it is common for some wire to become untangled. It can be pushed back into place or left if it is not in a visible area.

Tools:

- Simple Green or comparable cleaner
- For extra adherence use a waterproof glue such as LOCTITE Stik N Seal

To begin follow steps below.

- 1- Compare the screen to the rear vent opening.
- 2- Place the screens in the mounting position and make note where the adhesive will attach.
- 3- From underneath, clean the entire attachment area with cleaner, allow to dry.
- 4- Place the screen in position and step back to view. Make any minor adjustments.
- 5- Remove the red tape backing from the installation blocks. If desired place a line of waterproof adhesive between the installation blocks.
- 6- Carefully install the screens by gently pressing them into position. The 3M tape will immediately grip. Press each block against the upper vent opening.

Complete the above for both sides.

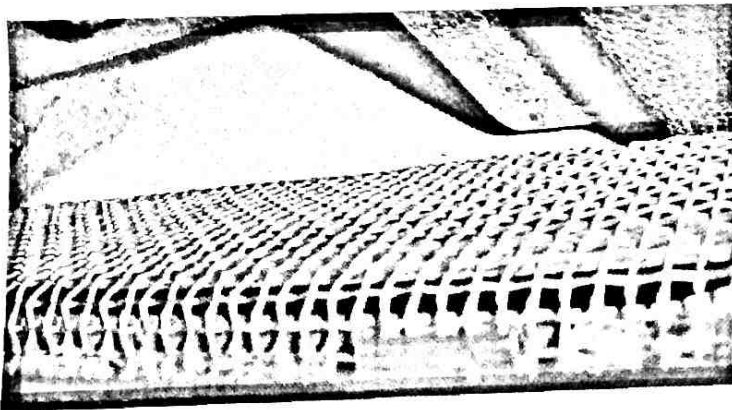


Figure 1: Shows the attached screen from below the bumper.

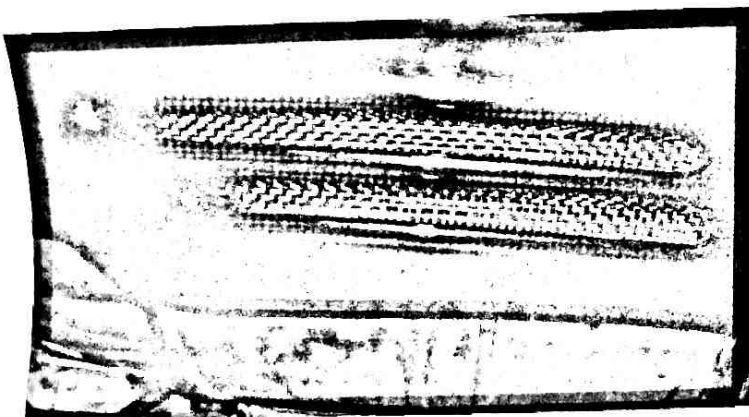


Figure 2: The attached screen.