




Rear Tag Frame Corvette Script Carbon Fiber Colors



AMERICAN CAR CRAFT INSTRUCTIONS

C7 Corvette GM Licensed "CORVETTE" Rear Tag Frame Part #052033

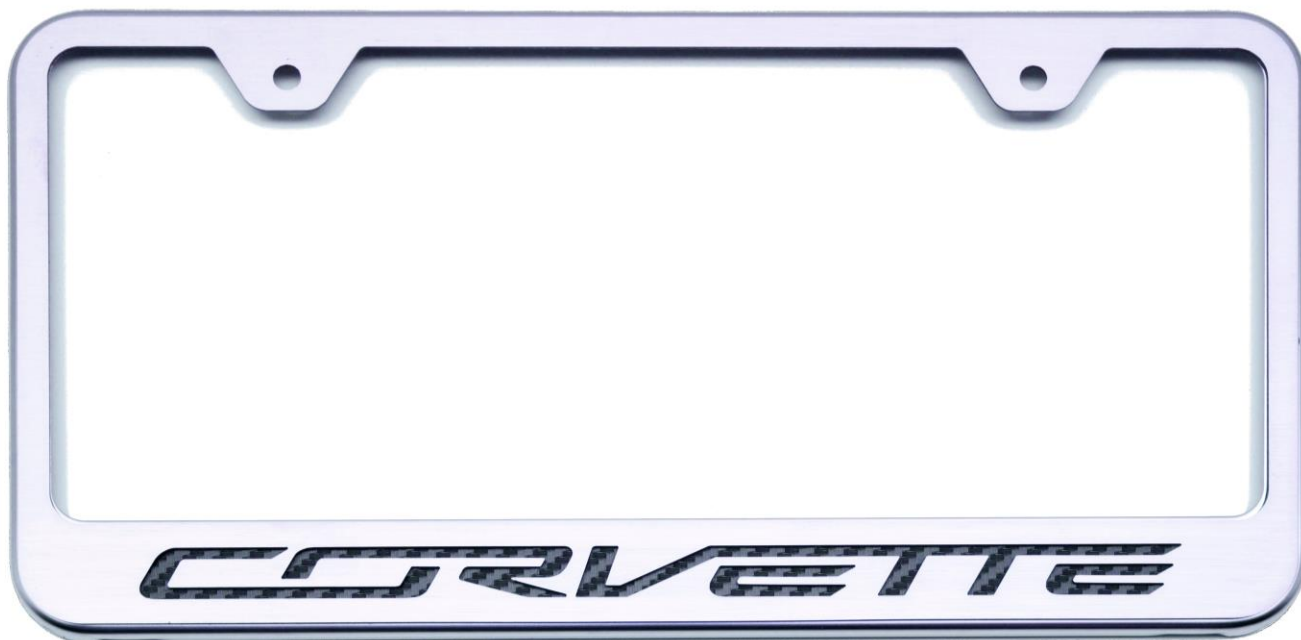

PARTS INCLUDED:

- 1-Chrome/Stainless/Carbon Fiber Tag Frame
- 2-M6-1.00x20mm Metric Hex Head Cap Screws
- 2-124NC 10mm Chrome Screw Covers

1. Remove screws from stock license frame.
2. Install new Tag Frame and install new hardware.
3. Snap Chrome Screw Covers over screw head.

Thank you and enjoy your purchase!

**If any questions occur during installation, please contact
AMERICAN CAR CRAFT**

18924 SAKERA ROAD-HUDSON FLORIDA 34667

Phone # 727-861-1500 Fax # 727-861-1520

www.americancarcraft.com