




## **AMERICAN CAR CRAFT INSTRUCTIONS**

### **C5 Corvette Rear Deck Trim 3pc w/Caps and screws Convertible only**

### **PART #031045**

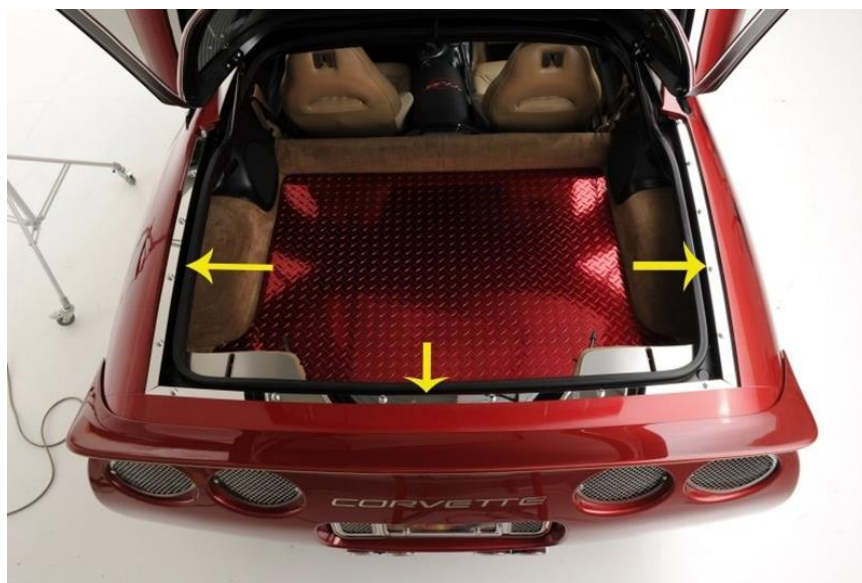

#### **PARTS INCLUDED:**

- 3-Stainless Trim Sections
- 12-Chrome Cap Covers
- 12-#8 3/4" Black Washer Head Screws

**Liner Information:** Your new accessories will come to you with a protective surface liner. Leave this liner in place until the installation is complete to prevent finger prints and or possible scratches during installation.

- 1 .Remove all the factory screws and then set the appropriate trim sections into position
2. Install all the replacement screws provided and snug them down. Do not over tighten as this will distort the trim. Remove the protective liner
3. Using some household 100% pure clear silicone apply a small dam into each of the chrome caps provided and then place them atop each screw head and allow to set overnight. Be careful not to apply to much silicone as this will cause an undesirable mess. Just a small dab sufficient enough make contact will do fine.

**Thank you and enjoy your purchase!**

**If any questions occur during installation please contact**  
**AMERICAN CAR CRAFT**  
**18924 SAKERA ROAD-HUDSON FLORIDA 34667**  
**Phone # 727-861-1500      Fax # 727-861-1520**  
**[www.americancarcraft.com](http://www.americancarcraft.com)**