


**#33251 1956-1967**  
**Burlap & Burlap Wires for**  
**Seat Springs/Foam**

**(insert between Springs & Foam)**



4 Sheets of Burlap — 20" wide x 20" length and 56 Wires

Seat Back & Bottom: **Weaving Pattern for Burlap Wires**

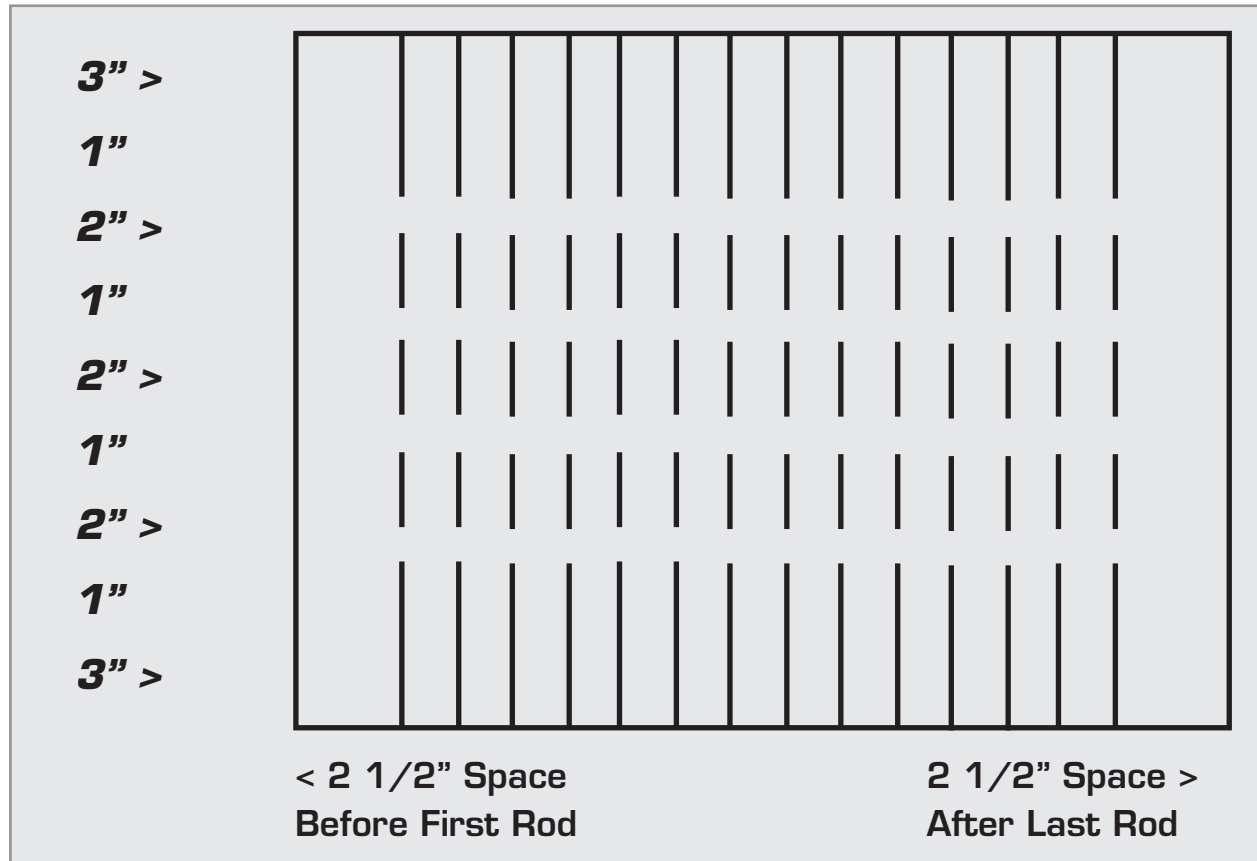

- Fold over Top & Bottom edges of Burlap so final size of rectangle is 16" High x 18" Wide.
- Weave wires through Burlap vertically in the following pattern, spacing them 1" apart and leaving 2 1/2" on each side.

**3" Above then 1" Under**

**2" Above then 1" Under**

**2" Above then 1" Under**

**2" Above then 1" Under**

**3" Above then 1" Under**

Then crimp end of wire around folded edge of Burlap, 1/2" at Top & Bottom.