



# **PFADT**

**SERIES BY AFE POWER**

## **C6 Front Tow Hook Instructions**

1. Remove front bumper, see Factory Service Manual
2. Test fit tow hook.
  - a. Tow hook should dip down
  - b. Place plate with holes against bottom of frame
  - c. Push tow hook forward until back stop is firmly against frame
  - d. Now slide tow hook to the side until the back stop touches the side rail
  - e. Tow hook can be installed on either the passenger or driver side
  - f. Driver side installation is easier because of less obstructions
  - g. See fig 1, fig 2 and fig 4
3. When tow hook is in place, mark holes for drilling.
4. Center punch and drill hole locations with 33/64" drill bit.
5. Install rivet nuts with included instructions and installation tool.
6. Test fit tow hook to ensure proper rivet nut locations.
7. Remove tow hook.
8. Mark and cut grill, See fig 3. Figure shows both Driver and Passenger cut locations.
9. Replace the front bumper, see Factory Service Manual.
  - a. do not install lower panels under the bumper
10. Make final installation of the tow hook through the grill.
11. Reinstall remaining lower panels, see Factory Service Manual.

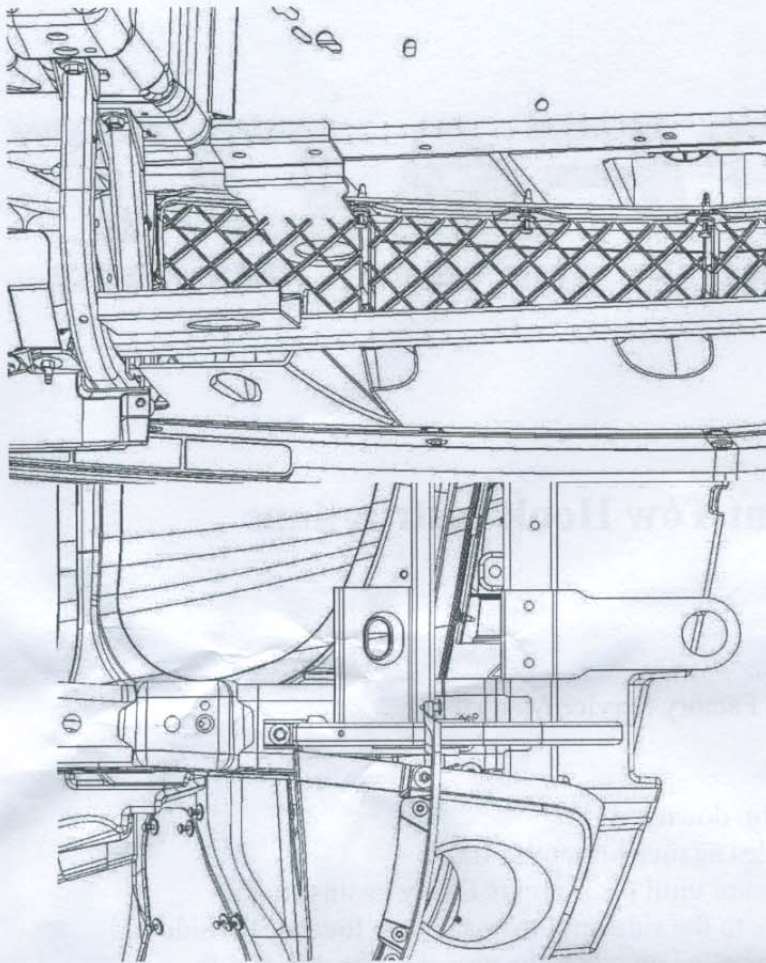


Figure 1: Looking from engine bay showing tow hook location  
from under the car showing tow hook location

Figure 2: Looking



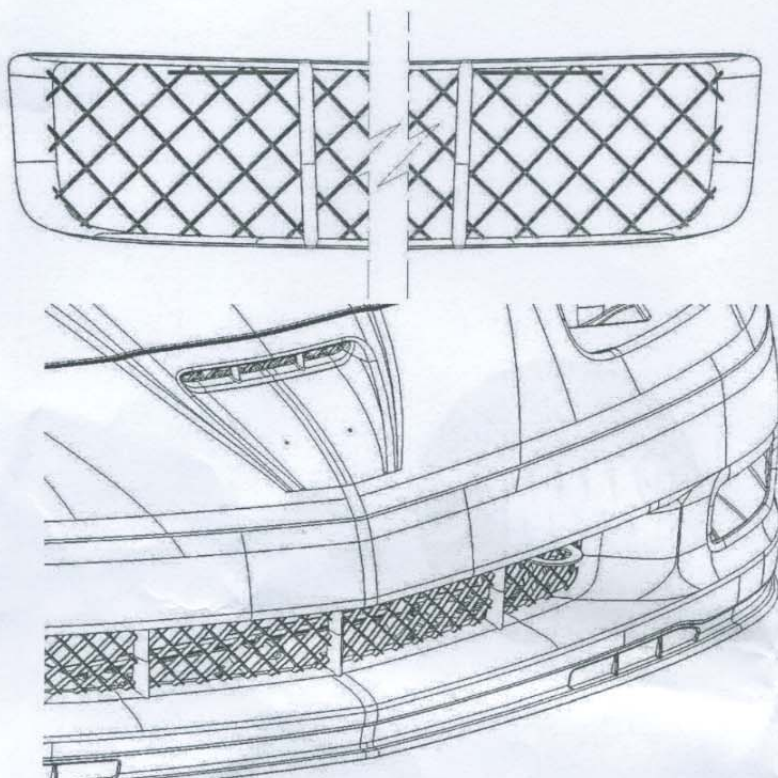


Figure 3: Grill trim guide. Note small trim areas at top.  
installation

Figure 4: Completed