

WMC

AFCONTROL

C6 Rear Tow Hook Instructions

1. Remove center muffler hanger bolts.
2. Slide tow hook into place between frame and muffler hangers. See fig 1
3. Reinstall muffler hanger bolts.
 - a. Before tightening, press the tow hook firmly against the bottom of the frame

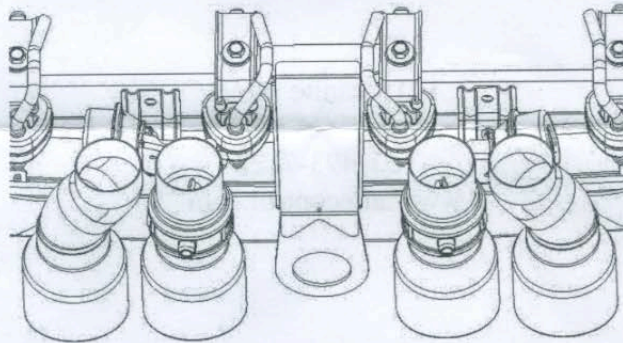


Figure 1: Looking from under the rear of the car.

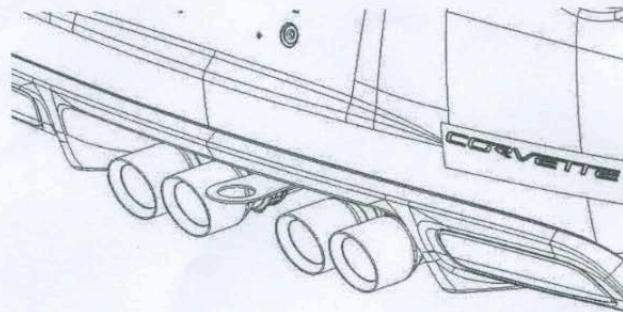


Figure 2: Showing completed installation.